

Electronic lock SELO-B

Lock settings to be effected by the administrator

General lock settings (valid for all users)		Individual lock settings (users 1 through 39)		
Setting the clock	Date	day / month / year	Enter new user	
	Time	hours / minutes can be set to automatic change-over from summer to winter time		
Select length of numerical code	7 or 8 digits	working under opening delay		
Setting the time functions	Opening delay	between 0 and 99 minutes		user is under control of the opening delay or he can unlock undelayed 1 = access authorisation alone 1/2 = access only allowed together with a further person 1/3 = access only allowed together with two further persons 0 = user's right to open lock temporarily suspended ADMI = user has co-administrator rights
	Access timer A	up to 8 time windows, linked to particular week days, to be repeated on a weekly basis		
	Access timer B	up to 8 time windows, linked to particular week days, to be repeated on a weekly basis		
	Blocked calendar	up to 13 one-time holidays and up to 7 permanent holidays (also periods of more than one day)		
Reset of all time functions	deletion of all blocked time settings	Code input		user's personal numerical code
Code change blocked for all users	to stop users changing a code setting effected by the administrator	Monitoring by means of an access timer		A = settings of timer A B = settings of timer B - = lock operation not blocked by a timer
Mode change	Professional mode	all functions available (factory setting)		Input/change user settings
	Lite mode	only simple basic functions are available		
		User name	up to 16 characters	
		working under opening delay		
		User's access authorisation level		
		Code input		
		Monitoring by means of an access timer		
		Delete user	complete removal of a user without knowing user's valid numerical code	

Data all users are allowed to input and/or read out on the display

- Change of own secret code (unless this function has been blocked by the administrator)
- Select the language of choice from among the 12 available display languages (CZ, D, DK, E, F, GB, H, I, NL, P, PL, TR)
- Read out the last 1000 operating events on the display (only administrator)
- Read out the last 1000 operating events to the PC (option, only administrator)
- Read out the lock ident number
- Read out the lock type and version
- Read out the counter to check the number of lock opening operations