

---

## **Instructions for use of double-bit high security locks**

**S1000, S2500, S2700  
S4500, S4700  
S6500**

---

Open the lock by turning the key as far as it will go.

Keep all keys (including duplicate keys) away from unauthorized persons. Therefore, remove the key from the lock after each opening or closing, and keep it in a safe place at all times to which only authorized users have access.

If one of the keys is lost, security can only be maintained if the lock is replaced at once. Contact the responsible service department without delay.

Keep keys clean.

Do not lubricate the lock with oil or grease.